



## 8 FM antenna (Select models only)

FM signal to computer

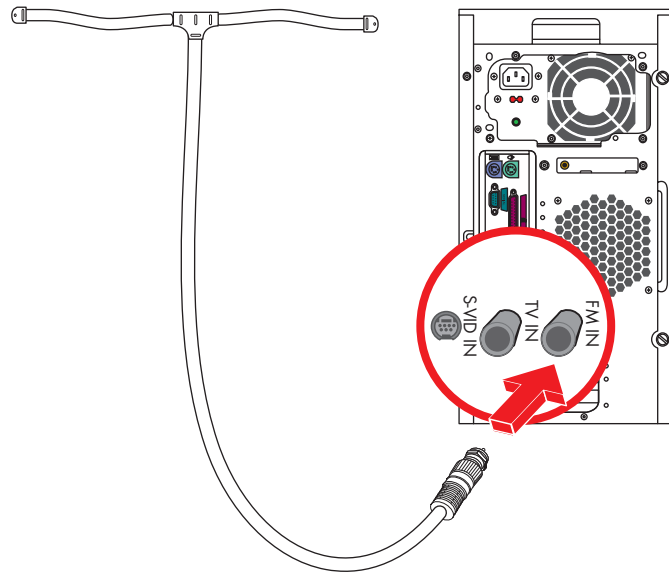


## 9 Power Connection

Computer to electrical outlet  
Grounded connection or connection to surge protector is recommended.

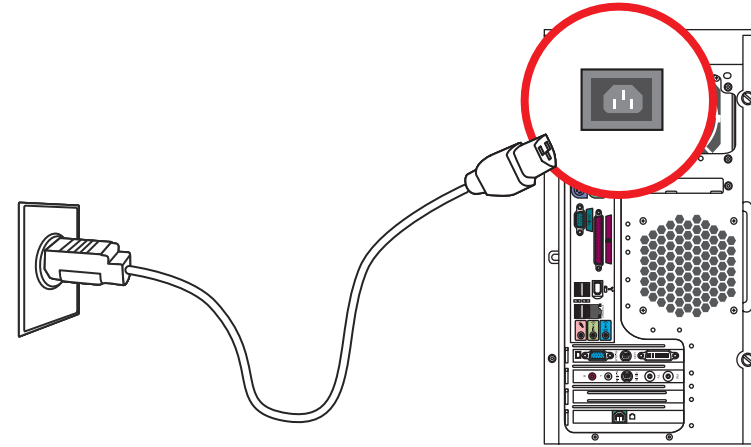


## 10 Modem (Select models only)

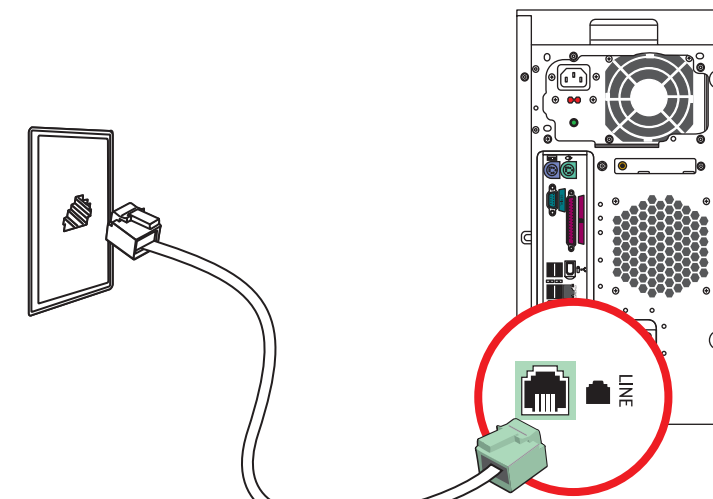


Connect modem cable to computer.

## 11 Power On

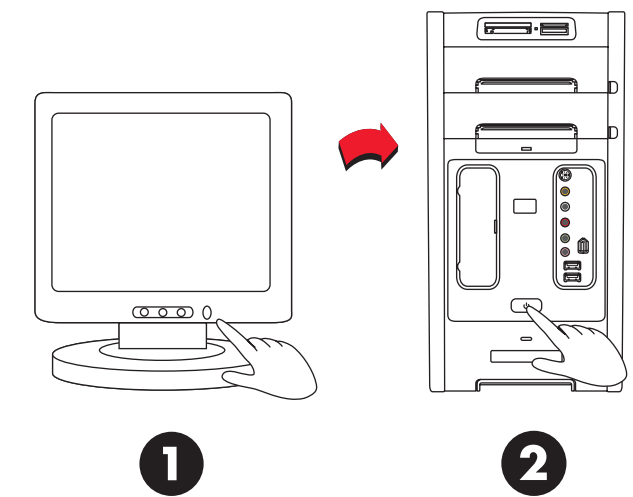


First, turn on monitor then computer.

Your PC may look different from the ones shown here. Component, connector location, type, and number vary by model.

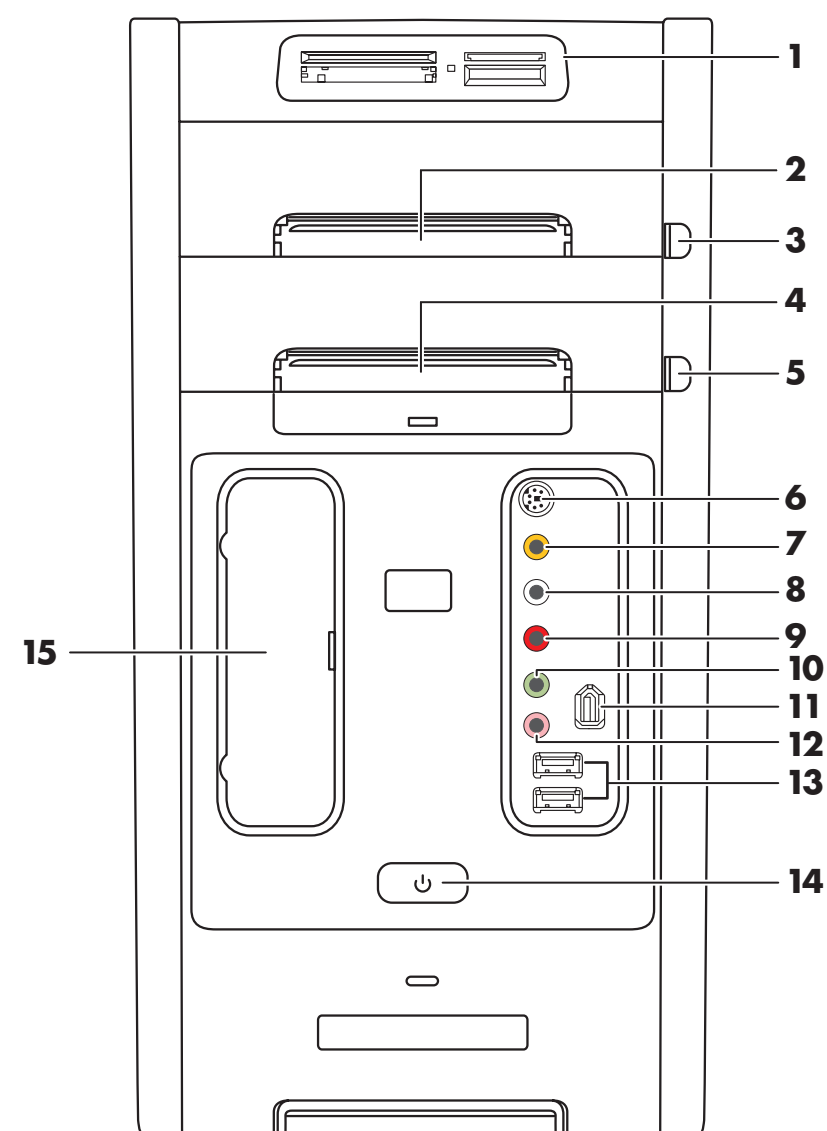

- 1 — Memory Card Reader
- 2 — Optical drive 1
- 3 — 1st Optical drive Eject button
- 4 — Optical drive 2
- 5 — 2nd Optical drive Eject button
- 6 — S-video in
- 7 — Composite video in
- 8 — Left Audio In
- 9 — Right Audio In
- 10 — Headphone (Audio Line Out)
- 11 — FireWire® (IEEE 1394) port
- 12 — Microphone
- 13 — USB 2.0 ports
- 14 — On button/indicator
- 15 — HP Personal Media Drive bay

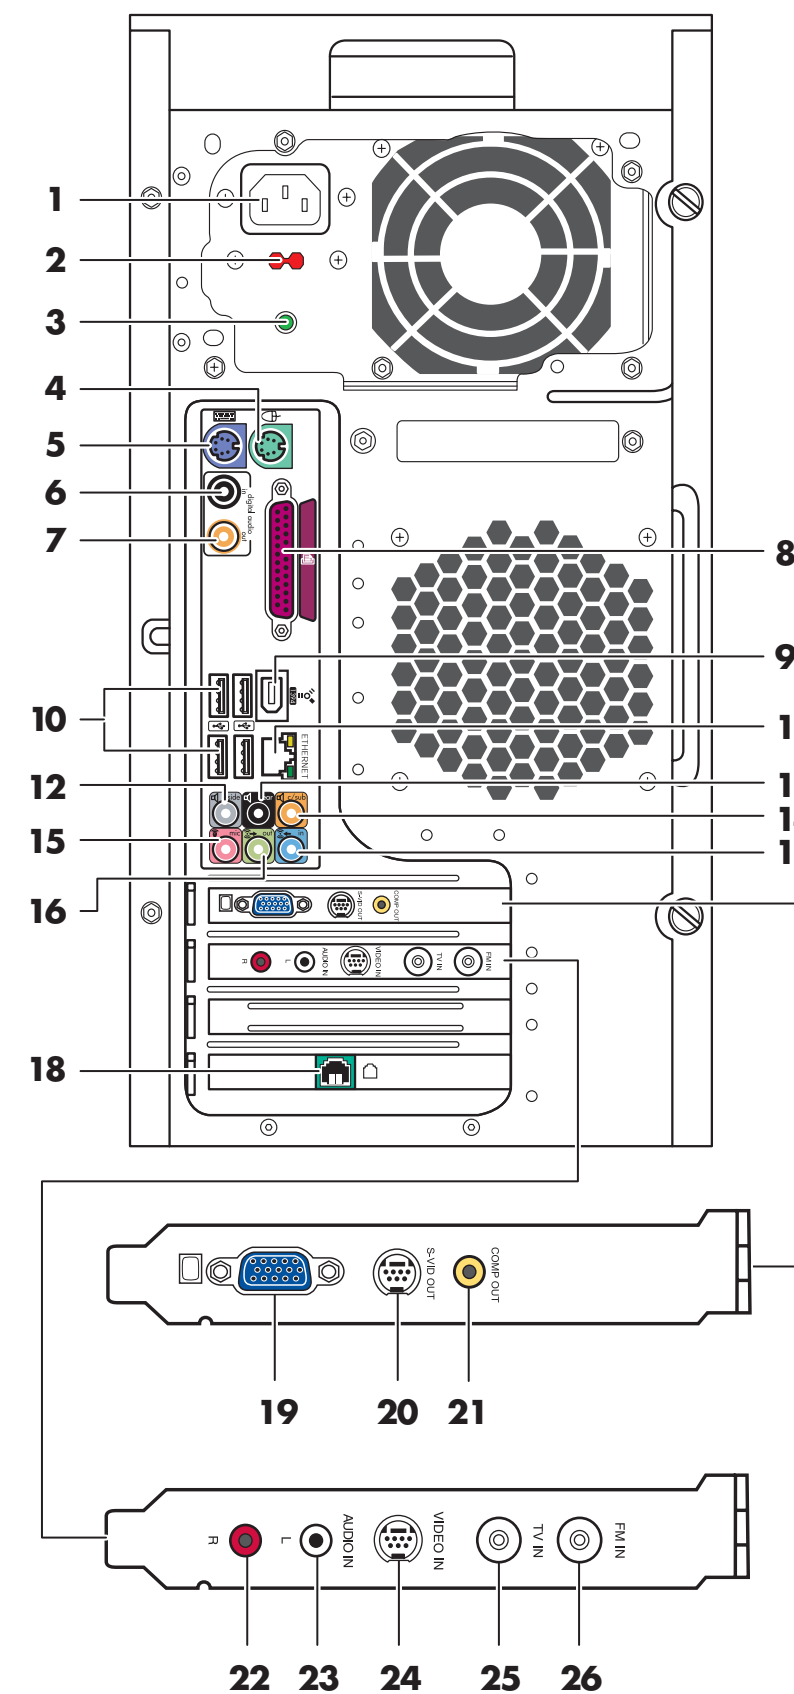

- 1 — Power Cord connector
- 2 — Voltage selector
- 3 — Power LED
- 4 — PS/2 Mouse connector
- 5 — PS/2 Keyboard connector
- 6 — Digital Audio In
- 7 — Digital Audio Out
- 8 — Parallel port
- 9 — FireWire (IEEE 1394) port
- 10 — 4 USB 2.0 ports
- 11 — LAN (Ethernet)
- 12 — Side speaker port
- 13 — Rear speaker port
- 14 — Center speaker/subwoofer port
- 15 — Microphone connector
- 16 — Audio Line Out
- 17 — Audio Line In
- 18 — Modem (Line In RJ-11)
- 19 — VGA monitor port
- 20 — S-video (TV Out)
- 21 — Composite (TV Out)
- 22 — Audio In right
- 23 — Audio In left
- 24 — S-video In
- 25 — TV/RF-In antenna/Cable connector
- 26 — FM-In radio antenna connector